



X-TYPE and S-TYPE

HANDBOOK SUPPLEMENT

This supplement should be used in conjunction with Owner's Handbooks JJM100216701, JJM100220701 and Audio system handbook JJM100826501.

Publication No. JSA100224701

Mode Functions and Clock

MODE BUTTON

Functions



The MODE button functions at two levels. Mode level 1 is used to adjust sound performance. Mode

level 2 can be used to adjust the audio display clock, to adjust Traffic Announcement (TA) and Voice Activation volume and to select Voice Activation Training.

Mode level 1

A short press and release of the **MODE** button will access the mode level 1 menu. Subsequent short presses of the **MODE** button will scroll through the available modes. When the desired mode is displayed, use the rotary volume control to adjust the setting.

Available modes

BASS	Increase/decrease
TREBLE	Increase/decrease
BALANCE	Left to right
FADE	Front to rear
SUB LEVEL	<i>Premium audio only.</i> Increase/decrease subwoofers
DSP POSITION	See detailed DSP text
ADVANCED MODE	Allows access to mode level 2. When ADV MODE N/Y is displayed, turn the rotary volume control to select ADV MODE YES . Subsequent short presses of the MODE button will scroll through the mode level 2 menu.

Digital signal processing (DSP) (Premium audio system only)

DSP can optimise sound performance for specific seating positions. To adjust the setting:

- In Mode level 1, scroll to **DSP POSITION**.
- Use the rotary volume control to cycle through **POS F-LEFT** (front left), **POS F-RIGHT** (front right), **POS REAR** and **POS FRONT** until the desired setting is achieved.

After approximately five seconds with no further actions or adjustments, the audio system will return to the previous display.

Note: *To improve the comfort of passengers in the rear of the vehicle, the bass performance of the subwoofer is reduced when DSP mode is set to **POS ALL** or **POS REAR**.*

For optimum bass performance, do not select **POSS ALL** or **POS REAR**

Mode Functions and Clock

Mode level 2 - ADVANCED MODE

When **ADV MODE YES** is selected subsequent short presses of the **MODE** button will scroll through the available modes. When the desired mode is displayed, use the rotary volume control to adjust the setting.

***Note:** Mode level 2 can also be accessed via a long press of the **MODE** button.*

Available modes

CLOCK FORMAT SET	Select 12HR or 24 HR clock display. Press the MODE button to move to the next clock setting.
CLOCK HOUR SET	Adjust then press the MODE button to move to the next clock setting.
CLOCK MINUTE SET	Adjust then press the MODE button to save the clock settings and move to the next mode.
TA VOLUME	Increase/decrease.
VOICE VOLUME	Increase/decrease.
VOICE A	Press the 'seek up' button to adjust.
VOICE B	Press the 'seek up' button to adjust.

Press and hold the **MODE** button to exit. The display will now revert to the screen in use before entering **CLOCK SET**.